

EMBROIDERY INSTRUCTIONS

(phone case, eyeglass case, wallet, card holder, small purse)


Recommended materials

- *For the base - dense fabric (for example, furniture) or eco-leather.*
- *For lining - thin fabric (silk, polyester, cotton or felt).*
- *Foam rubber or batting approximately 5 mm (1/5 in) thick for extra volume.*
- *Water-soluble stabilizer for embroidery (in one or two layers, depending on the density).*
- *#80/12 needles. A good choice is SCHMETZ Microtex (Sharp).*
- *40-weight polyester (or rayon) threads for the needle.*
- *60-weight thread for the bobbin. In the last steps of embroidery, wind the needle thread around the bobbin (see photo).*
- *Snap button.*

Embroidery order

Step 1:

Stitch for attaching the foam to the stabilizer


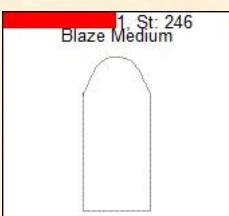


- **Cut off excess foam close to the stitching**



Step 2:

Basting stitching for attaching fabric to stabilizer

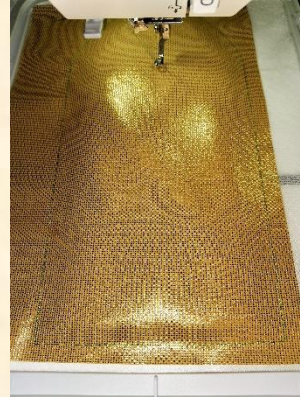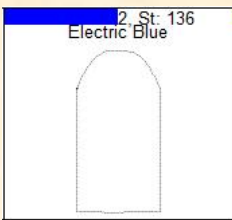


Step 3:

Embroidery of the main pattern



- **Remove the hoop from the machine. On the back of the hoop, secure the lining fabric with masking tape around the perimeter.**

Or use temporary glue

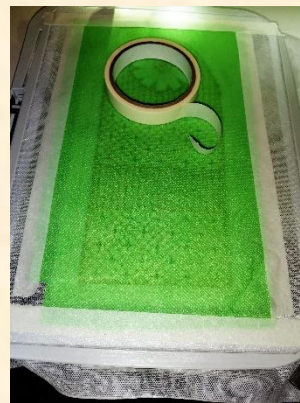


- Before returning the hoop to the machine, replace the bobbin with a needle thread bobbin



Step 4:

Basting stitching for attaching lining fabric to stabilizer

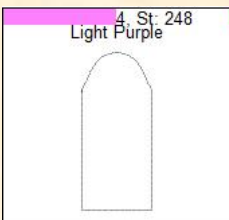


- Trim any excess fabric on the right and wrong sides next to the stitching




Step 5:

Reinforcement zigzag stitch

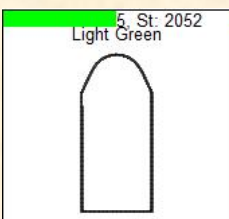


Step 6:

Roller finishing stitch

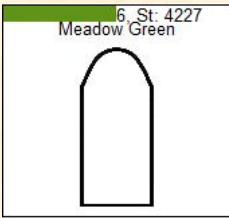

- Carefully cut off the stabilizer, being careful not to damage the embroidery. Remove any stabilizer residue with a damp cotton swab or sponge

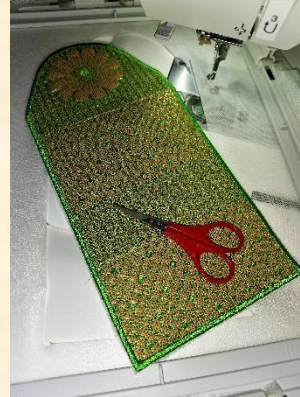

- Install both parts of the button



- • Fold the cover and sew on both sides by hand or with a sewing machine with the same thread that was used to embroider. When sewing with the sewing machine, use zigzag stitch that is the same width as the roller stitch



